 


VACUUM COMPONENTS

051-00158 — 1/8"
 051-00010 — 3/16"
 051-00028 — 1/4"

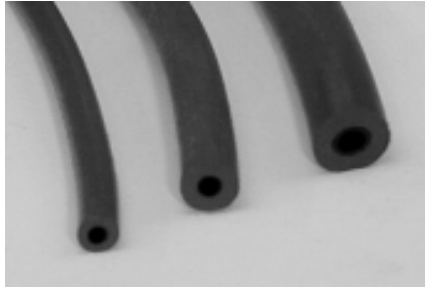

Bulk Vacuum Hose

030-00043



 
12 Volt Vacuum Pump
 Internal Switch engages pump automatically on Loss of Vacuum

054-00002




Vacuum Reservoir w/Check Valve

030-00025 — 2" Arm
 030-00046 — 2-1/2" Arm

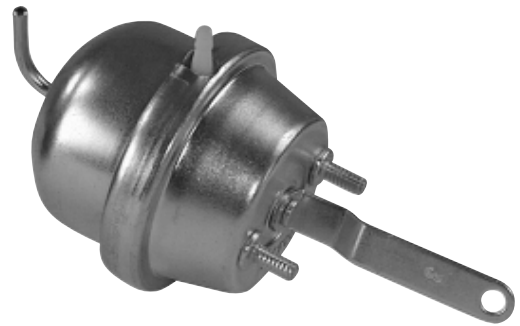

Single Action Vacuum Servo

 030-00105 — 2" Arm
 030-00029 — 2-1/2" Arm

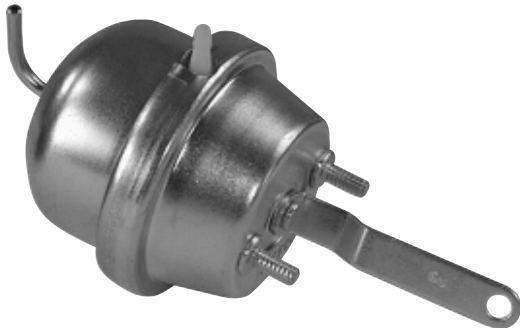

Double Action Vacuum Servo

034-00124
 Valve Assy., Vacuum push button replaces 034-00015

 


032-00109



12 Volt Vacuum Solenoid Valve
 3 Port
 Can be used as Normally open or Normally closed

050-00029 — 1/8" x 1/8"
 062-00250 — 1/8" x 3/16"



Vacuum Hose Splice

VACUUM COMPONENTS

062-00277 — 1/8" x 1/8" x 1/8"
050-00292 — 3/16" x 1/8" x 3/16"
062-00195 — 1/4" x 1/4" x 1/4"
036-00432 — 3/8" x 1/94" x 3/8"



Vacuum Hose Tee
